


# Washing Dekoria Roman Blinds

The blind is attached to the track with velcro fittings, which enable safe washing of the fabric.

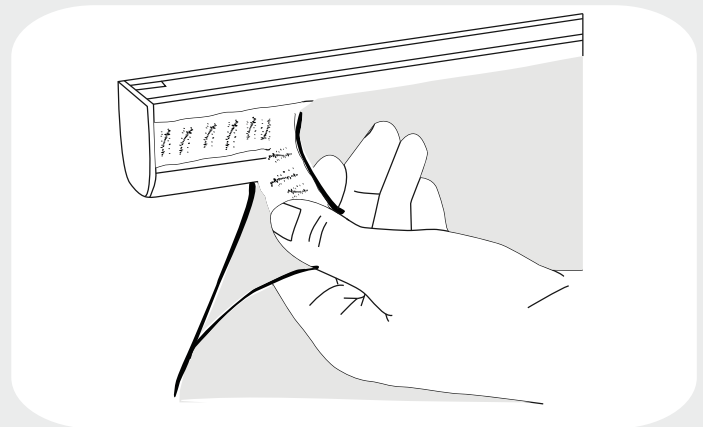

## To wash the blind:

1. Unclip the cassette track/rail from wall brackets.
2. Unfold the blind on a flat surface e.g. on a table or on the floor.
3. Unstring the blind and remove dowels.
4. Detach the blind from the track/rail (with velcro fittings).

## After washing as per instructions provided on the care label, drying and ironing the blind:

1. Attach the blind to the track/rail (with velcro fittings).
2. Insert dowels.
3. Re-string the blind (thread the strings through eyelets and tie them at the bottom of the blind).
4. Place the track/rail in the wall brackets.

## Tip

Before unstringing the blind, take a picture of the back of the blind with the layout of the strings.

This will help you re-string the blind correctly after washing.

