


Washing Dekoria Roman Blinds

The blind is attached to the track with velcro fittings, which enable safe washing of the fabric.

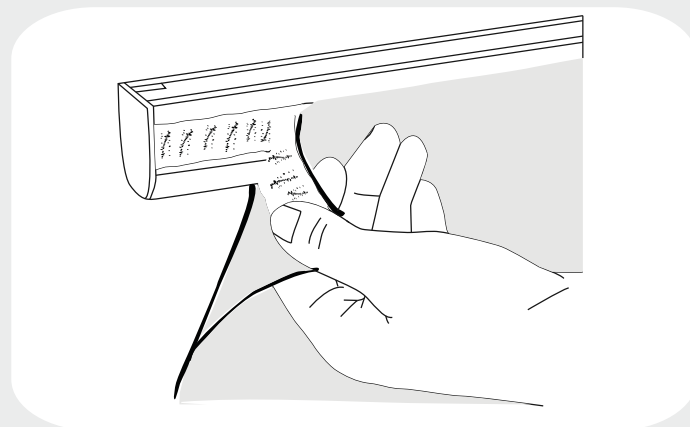

To wash the blind:

1. Unclip the cassette track/rail from wall brackets.
2. Unfold the blind on a flat surface e.g. on a table or on the floor.
3. Unravel the blind cords and take out the cords from the eyelets on the strings.
4. Detach the blind from the rail (using Velcro).

After washing as per instructions provided on the care label, drying and ironing the blind:

1. Attach the blind to the track/rail (with velcro fittings).
2. Re-string the blind (thread the strings through eyelets on the strings and tie them at the bottom
3. of the blind).
4. Place the track/rail in the wall brackets.

Tip

Before unstringing the blind, take a picture of the back of the blind with the layout of the strings.

This will help you re-string the blind correctly after washing.

