


Roman blind "up and down" - dimensioning

Mounting in the window light (invasive):

The **width of the blind** is the width of the window glass including seal.

IMPORTANT: Specify the width of the window glass including the seal in centimetres with accuracy to the millimetre (i.e. one decimal place). In order to take into account any unevenness of the window frame, the width of the glass should be measured in three different places and given the smallest of these values.

The **height of the blind** is the height of the window pane.

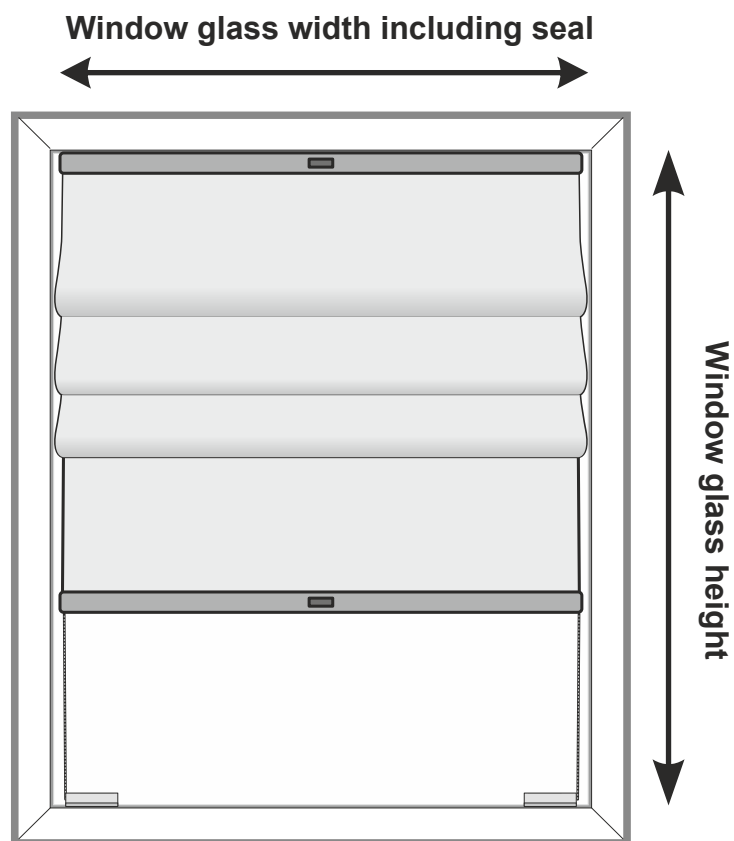

Mounting on the window frame (non-invasive):

In order to obtain the correct **width of the blind** add approximately 2 cm on each side to the window glass width.

IMPORTANT: When adding the above values, take into account the position of the handle so that the installed blind does not catch on the handle.

The **height of the blind** is the height of the window sash.

